

83–645 Removal and installation of ambient temperature sensor

Data


Resistance at 20 °C (68 °F)
ambient temperature

nominal	363 ohms
max.	388 ohms
min.	337 ohms

Removal

- 1 Pull off electrical plug (62) while paying attention to safety hooks.
- 2 Unscrew two screws (63) and pull ambient temperature sensor (8) out of front wall.


8 Ambient temperature sensor
62 Electrical plug
63 Screw

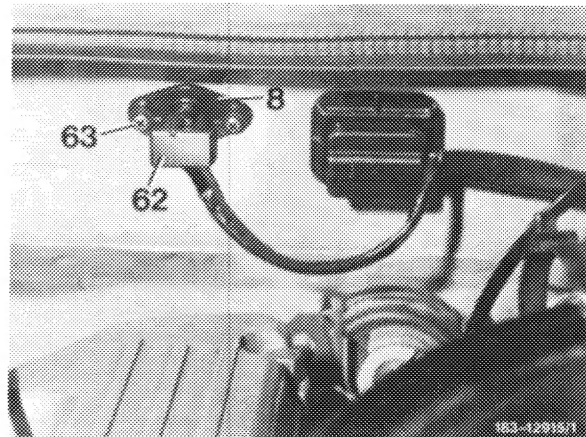

Installation

- 3 Test ambient temperature sensor (8) with ohmmeter (83–609).
- 4 Attach ambient temperature sensor (8) with screws (63) to front wall and plug on electrical plug (62).

8 Ambient temperature sensor

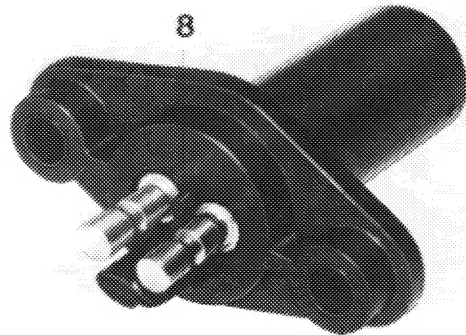

883 - 11334